

SOREX wirelessKey 4.0

Quick starting guide

This quick starting guide explains the pairing process for a mobile phone with the installed wirelessKey module and how to connect it to door opening systems. For installation advice and other instructions, please refer to the user manual, which is available through our website www.sorex.eu or via the QR-Code above.

Pairing a mobile phone:

1. Switch Bluetooth of your mobile phone to on and set it to visible.

Please note: With some mobile phones it is necessary to remain in the Bluetooth settings and/or switch to security mode.

2. Hold your mobile phone close to the SOREX wirelessKey 4.0 outdoor unit for at least 10 seconds.

After approximately 10 seconds, an incoming connection „add.SOREX-w.Key“ or „Headset“ will appear.

3. Enter your Tür-PIN

Enter the 10-digit Tür-PIN, which can be found on the sticker in the enclosed envelope (see Figure 1), to build up a connection with "add.SOREX-w.Key" or "Headset". After entering the Tür-PIN, your mobile phone is paired with the **SOREX wirelessKey 4.0**.

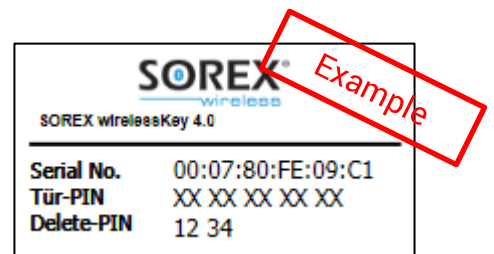


Figure 1: Exemplary sticker of Tür-PIN

4. Final step

Your mobile phone is now entitled to open your door. Some devices ask to build up a connection automatically. This has to be confirmed.


Tip: Use the free smartphone-app "SOREX Bluetooth Door Opener" to set your smartphone's Bluetooth to visible quickly and easily, by simply opening the app.

Please note: To connect portable transmitters and RFID media with the SOREX wirelessKey 4.0, the management software has to be used. Mobile phones can also be paired via the management software.

SOREX wirelessKey 4.0

Wiring Plan

For pinnumber and –function of the SOREX wirelessKey 4.0 refer to the table and the picture below. The wiring with common door opening systems is depicted on the following pages

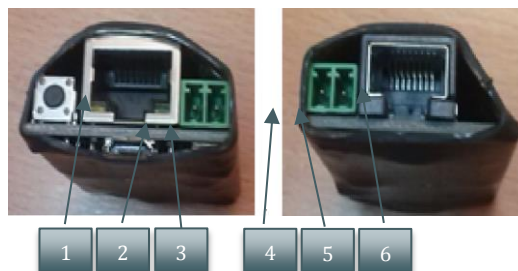

Nummer	Funktion
1	Jack for LAN-Connection
2	Positive pole
3	Ground
4/5	Potentialfree contact
6	Jack for connection to outdoorunit

